

Opzione albero ingresso sporgente con cuscinetto Option bearing-mounted input shaft

	PK22	PK32, P32, LN	PK32	PK42, P42, LN	PK52, P52, LN
Valori misurati al centro dell'albero e n1=3,000 rpm / Value based on shaft centre and n1=3.000 rpm					
Carico radiale <i>Radial load</i>	10 N	25 N	25 N	70 N	110 N
Carico assiale <i>Axial load</i>	3 N	10 N	10 N	40 N	50 N
Pressione di pantaggio <i>Fitting pressure</i>	max. 150 N	max. 120 N	max. 120 N	max. 320 N	max. 500 N
Dimensioni / Dimensions					
Stadi / Stages	1 2 3 4	1 2 3 4	1 2 3 4	1 2 3 4	1 2 3 4
k	27 35 44 52	38 47 57 66	41 51 60 70	61 74 87 100	71 85 99 113
a	22	32	32	42	52
b	19	26	26	36	40
c	14 h8	20 h8	20 h8	25 h9	32 h8
d	4 h7	6 h7	6 h7	6 h7	10 h7
e	M2 x 4 3 x 120°	M3 x 4 4 x 90°	M3 x 4 4 x 90°	M4 x 10 ^{a)} 4 x 90° ^{a)}	M5 x 10 4 x 90°
f	10	16,6	16,6	22,2	20
h	4,5	3,4	3,4	2,8	5
i	14,5	20	20	25	25
m	2	3	3	2	3
o		2,5	2,5	3	2
p	Area 3,5 x 8	A2 x 2 x 12	A2 x 2 x 12	A2 x 2 x 16	A3 x 3 x 16
z					M3 x 9
Cuscinetti <i>Bearings</i>	Bronzina <i>Sintered bearing</i>	Cuscinetto a sfera <i>Ball bearing</i>	Bronzina <i>Sintered bearing</i>	Cuscinetto a sfera <i>Ball bearing</i>	Cuscinetto a sfera <i>Ball bearing</i>

^{a)} Posizione ≅ M4 lato uscita

^{a)} Position ≅ M4 output side

